Brickcom

Brickcom Internal Training Course Intelligent Video Analytics

FAE Team 2012.02.06

Preface

- IVA, Intelligence Video Analytics
- IVA feature supported model
 - 100Ap, 130Ap, and 130Np series
- IVA feature supported firmware version
 - v3.1.0.5 or later
- IVA only supports Microsoft Internet Explorer
 - Not including Microsoft Internet Explorer 64bit
 - Not support FireFox, Chrome, Safari browser etc.
- Limitation of the video configuration
 - Only support H.264 and MPEG4 codec.
 - Maximum FPS is 15 only.
 even set higher than 15, it will go back to 15
- The accuracy is around 80%

Consideration before using IVA


- IVA should not be used in critical scenarios that may have life or death situations, nor should it be used to alert law enforcement.
- Light condition, Should be within the Brickcom cameras' specifications. Additional lighting should be added if it is necessary.
- Various light phenomena, Sweeping car headlights, shadows or reflections may consider as moving objects and can give the false detection.
- Weather, Heavy rain or snow may reduce the detect rate or false detection.
- Height, To get a better result, recommend to install camera at 3m height or higher
- Speed, Fast or too slow moving objects may not be detected
- Size, Too large or too small objects my not be detected

People Counting

To counts the number of people moving through a certain area.

People Counting

WWW.BRICKCOM.COM

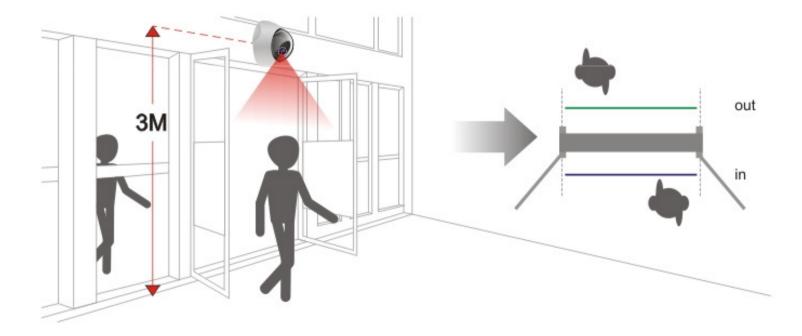




Adding/Missing Object

Allows the user to program the camera to track suspicious situations while protecting people, property and assets more efficiently.

Adding/Missing Object

WWW.BRICKCOM.COM

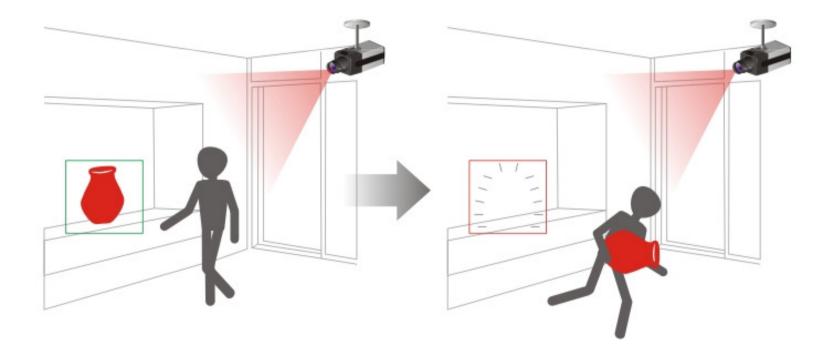



Object Tracking

Allows the user to program the camera to track suspicious situations.

Objecting Tracking WWW.BRICKCOM.COM




Tampering Alarm

enables security staff to detect disrupted camera operation, by automatically alerting the operator when a camera is re-directed, blocked or manipulated.

Tampering Alarm

WWW.BRICKCOM.COM


Brickcom

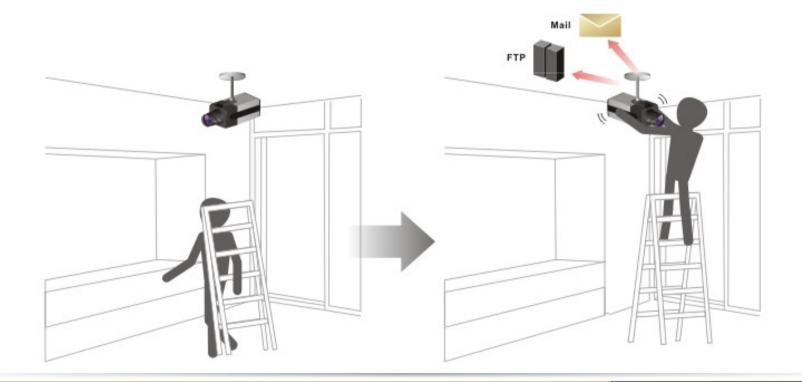

Brickcom


IVA Events and Actions

- IVA is the embedded feature in camera
- When the IVA event is triggered, there will be some actions
 - Save stream to SD card, email, Samba and FTP
 - Send snapshot to SD card, email, Samba and FTP
 - Activate Digital Output
 - Send HTTP Notification
 - Send Email with text message

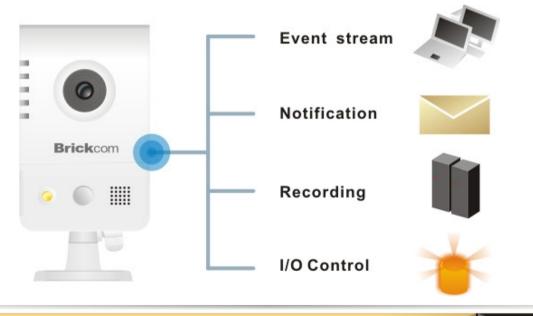

Instruction

The IVA feature is Event Setting Page Click Video Analytics to setup the IVA feature

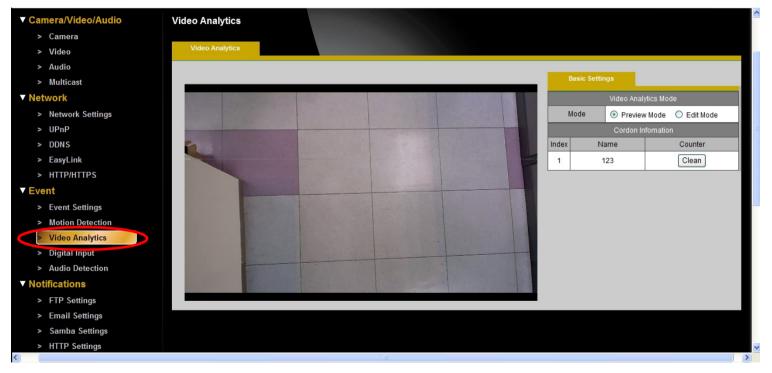

Basic Settings- Preview Mode

Basic Settings Preview Mode Index and Name Reset the counter to 0

Video Analytics	
	Basic Settings
	Video Analytics Mode
	Mode O Edit Mode
	Condom information
	Index Name Counter


Basic Settings – Edit Mode

Edit Mode

Enable and choose the video source to configure IVA function.

Cordon Information. Max: 3

To Modify or Delete the object

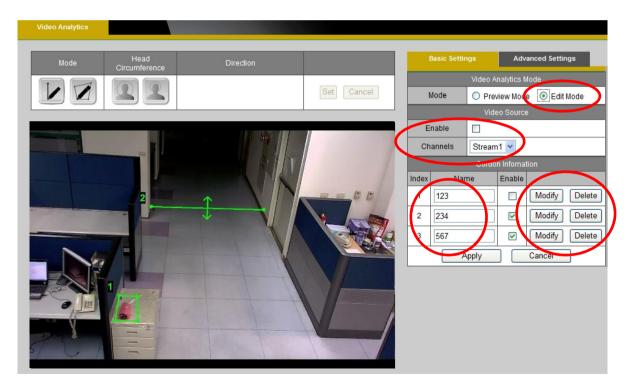



Brickcom

lcons



This will be showed when click any of icons above on edit mode



Line Mode: To draw the line(s), min 2 points, Max:10 points



Region Mode: To set the range of miss/left object, (min 3 points, max 10 points)





Head Mode: Min Head Circumference

Clockwise Direction



Counterclockwise Direction

Dual Direction

Advanced Settings

Mode Head Circumference	Direction		Basic Settin	gs	Advanced Settings
				Common	Parameter
		Set Cancel	Trigger Point	Bottom	Center
			Mini sampling frame	5 💌	
			Min pixels per object	25 💌	
			Trajectory Smoothness	4	
				On Scree	n Display
			Cordon	Enable	
			Moving Object	Enable	
			Trajectory	🗹 Enable	
	ANTE LA CARTE		Counting	Enable	
			Pe	eople Count	ing Parameter
			Human Detection	Enable	
			Min Head Circumference	144	
			Max Head Circumference	174	
			Sensitivity	9 🖌	
			Tolerance	2 💌	
			L	eft/Miss Obj	ect Parameter
			Draw Abandon Object	Enable	
			Abandon Start	100 F	rame(s) (10-300)
			Abandon End	170 F	rame(s) (10-300)



Advanced Settings - Common Parameter 1/2

5.	Common Parameter	
Trigger Point	Sottom Center	 \uparrow
Mini sampling frame	5 💌	
Min pixels per object	25 💌	
Trajectory Smoothness	4	
		center
3		Bottom



Advanced Settings - Common Parameter 2/2

Min sampling frame

An Object moves over the set value, then the system will determine the object is moving or an object. Range 1-15.

Min pixels per object

the minimum pixels of an object. Range 1-100.

Trajectory Smoothness

the smoothness of trajectory on the OSD. Range 1-32.

Y	Common Parameter				
Trigger Point	Sottom O Center				
Mini sampling frame	5 💌				
Min pixels per object	25 💌				
Trajectory Smoothness	4				

Brickcom

Advanced Settings - On Screen Display

Cordon

enable to show the cordon on the screen

Moving Object

enable to show the moving objects on the screen

Trajectory

enable to show the trajectory of the moving objects on the screen

Counting

enable to show the number that how many objects been cross over set lines on the screen

On Screen Display				
Cordon	Enable			
Moving Object	🗹 Enable			
Trajectory	Enable			
Counting	🗹 Enable			

Brickcom

Advanced Settings - People Counting Parameter 1/2

Human Detection

when enable the counter only counts when human cross over the line.

Min Head Circumference

set the parameter by click this icon drawing on the screen.

Max Head Circumference

set the parameter by click this icon drawing on the screen.

Sensitivity

the sensitivity of human detection.

Tolerance

the tolerance of the circle

People Counting Parameter				
Human Detection	Enable			
Min Head Circumference	144			
Max Head Circumference	174			
Sensitivity	9 🔽			
Tolerance	2 💌			


Advanced Settings - People Counting Parameter 2/2

Min Head Circumference

set the parameter by click this icon drawing on the screen.

Max Head Circumference

set the parameter by click this icon drawing on the screen

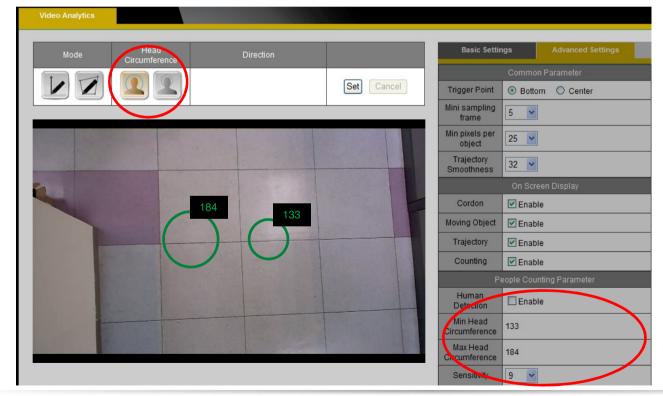



Advanced Settings - Left / Miss Object Parameter

Draw Abandon Object

Enable to enable left / miss object detection

Abandon Start

How many frames the system will trigger after the object been moved or missed

Abandon End

How many frames after the object been moved or missed, the system will set that certain screen as the basic frame.

Left/Miss Object Parameter				
Draw Abandon Object Enable				
Abandon Start	100 Frame(s) (10-300)			
Abandon End	170 Frame(s) (10-300)			




Scenario Tuition

- Scenario1 for People Counting
- Scenario2 for Missing Object

Scenario 1: People Counting 1/5

1. Select "Video Analytics" in the web GUI

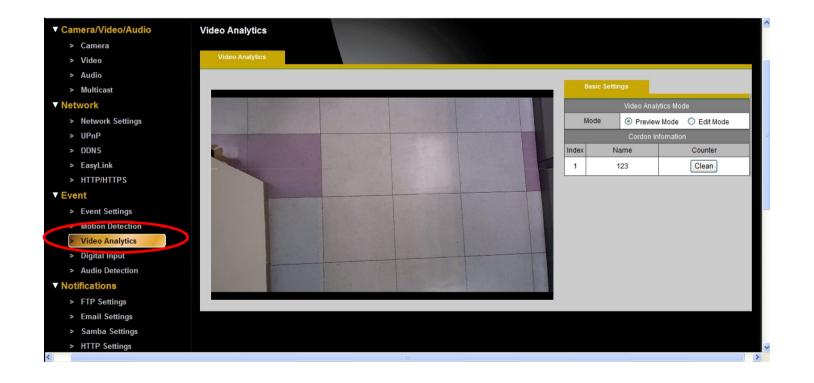


Scenario 1: People Counting 2/5

1. Select "Edit Mode"

Mode Head Circumference Direction Image: Circumference Image: Circumference Video Analytics Mode Image: Circumference Image: Circumference Video Source Image: Circumference Image: Circumference Video Source Image: Circumference Image: Circumference Cordon Information Image: Circumference Image: Circumference Apply Cancel	Video Analytics					
Set Cancel Mode Video Source Enable Channels Stream1 Cordon Information Index Name Enable	Mode	Head Circumference	Direction		Basic Settings	Advanced Settings
Image: Stream 1 Cordon Information Index					Video	Analytics Mode
Enable Cordon Information				Set Cancel	Mode 🔿 P	review I ode 💿 Edit Mode
Channels Stream1 Cordon Information Index Name Enable					V	ideo Source
Cordon Information					Enable 🗌	
Index Name Enable					Channels Strea	am1 💌
					Cor	don Infomation
Apply Cancel					Index Name	Enable
					Apply	Cancel
			Star and a start			
	1000					
		the second				
	F					

Scenario 1: People Counting 3/5

- 1. Click "Line Mode"
- 2. Draw the line
- 3. Choose the direction
- 4. Click Set to save the settings

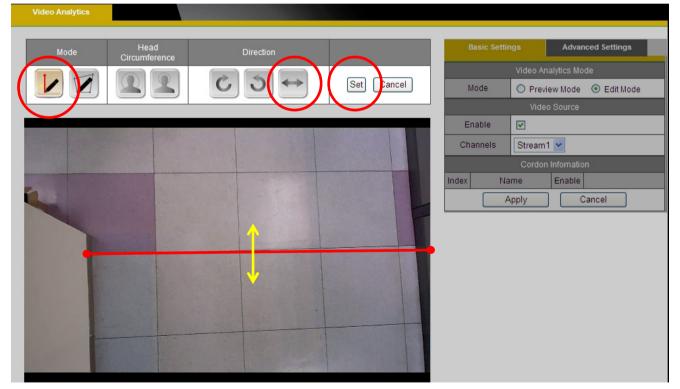


Scenario 1: People Counting 3/5

- 1. Click on Head Circumference to define the maximum and minimum parameter.
- 2. Click Set to save the settings

Mode Head Direction Circumference		Basic Settin	gs Advanced Settings
			Video Analytics Mode
	Set	Mode	O Preview Mode 💿 Edit Mode
			Video Source
		Enable	
		Channels	Stream1 👻
			Cordon Information
		Index Nam	ne Enable
		1 123	Modify Delete
		A	pply Cancel


Scenario 1: People Counting 4/5

- 1. Put the name for this cordon
- 2. Enable the video source and choose the channel
- 3. Click on Apply

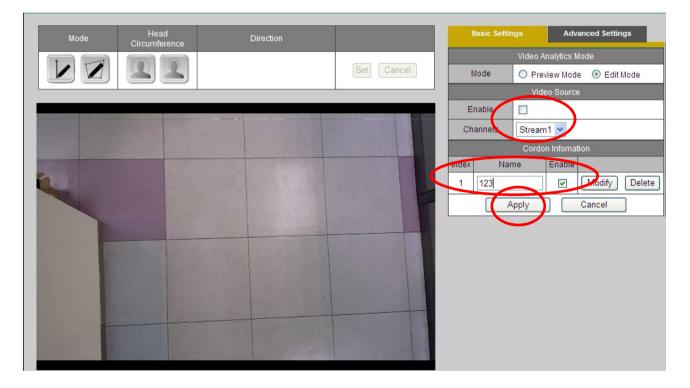

Scenario 1: People Counting - Advanced settings 5/5


- 1. Click on Edit Mode
- 2. Choose Advanced Settings
- 3. Enable the human detection
- 4. Adjust the common and people counting parameter basis of your scenarios.

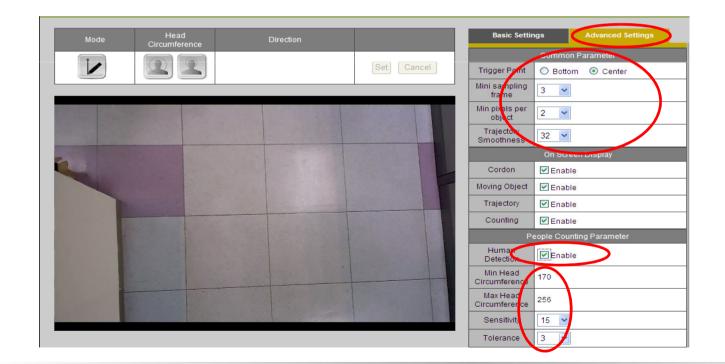



Scenario 2: Missing Object 1/5

1. Select "Video Analytics" in the web GUI

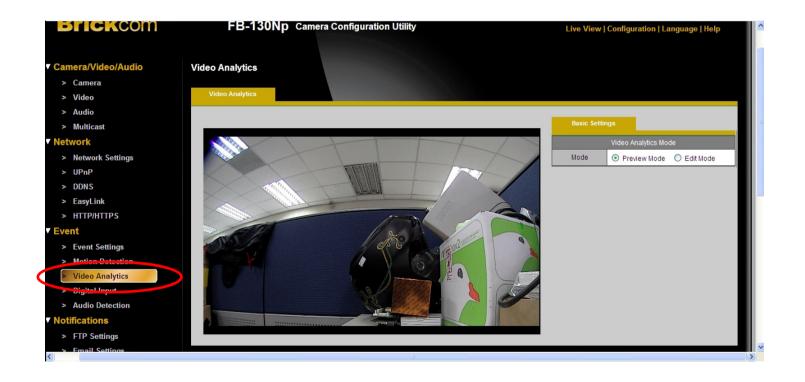



Scenario 2: Missing Object 2/5

- 1. Select "Edit Mode"
- 2. Clock on Region Mode

Video Analytics						
Mode	Head Circumference	Direction		Basic Settir	igs	Advanced Settings
					Video Analy	tics Mode
			Set Cancel	Mode	O Preview	Node 💿 Edit Mode
					Video S	ource
				Enable		
				Channels	Stream1	 Image: A start of the start of
		TTEM			Cordon Inf	fomation
	AND TO THE T			Index Na	me E	inable
	All and a second	Entrantista 10	×	A	pply	Cancel
		and the second s				
AD	F	1 c A				
151		are an	2			
and the second		1 6 6				

Scenario 2: Missing Object 3/5


- 1. Draw the region
- 2. Click Set to save the settings

Video Analytics							
Mode	Head Circumference	Direction			Basic Setting	gs	Advanced Settings
						Video Ana	alytics Mode
			Set Ca	ncel	Mode	O Previe	ew Mode 💿 Edit Mode
						Video	Source
					Enable		
			Th		Channels	Stream1	~
		THEFT	The			Cordon	Infomation
	3			Ir	ndex Nar	ne	Enable
	Arran Marine	ETHEREN	1		(Aș	oply	Cancel
			18 Julie				
En		les M		N P			
151 61		JE D	- Sinkle	9			
sutting .							
-							

Scenario 2: Missing Object 4/5

- 1. Put the name for this cordon
- 2. Enable the video source and choose the channel


3. Click on Apply

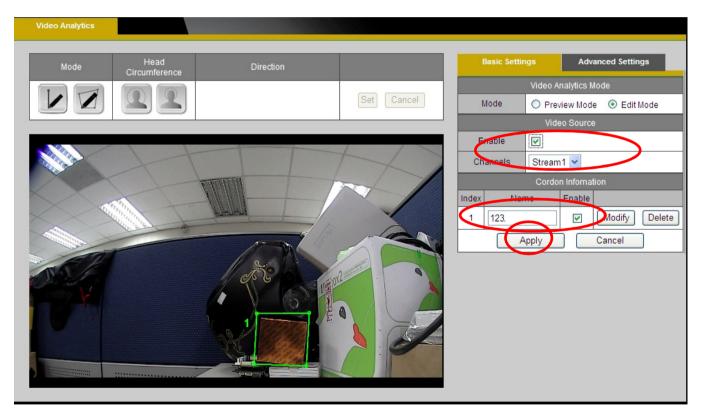

Brickcom

Scenario 2: Missing Object - Advanced settings 5/5


- 1. Click on Edit Mode
- 2. Choose Advanced Settings
- 3. Enable and adjust the parameter .

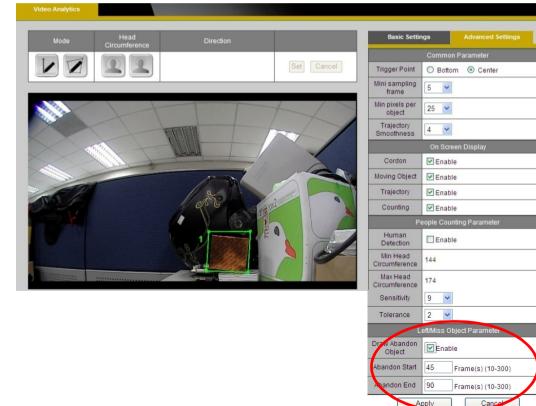


Scenario 2: Missing Object - trigger



Object is there

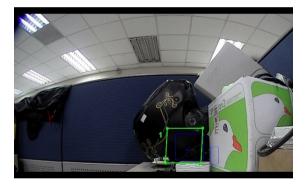

Object was moved

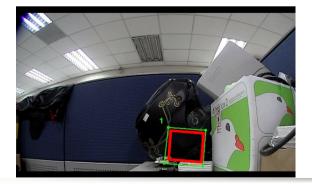


Triggered



Video Clips(option)

- People Counting
- Missing Object
- Object Tracking
- Tempering Alarm

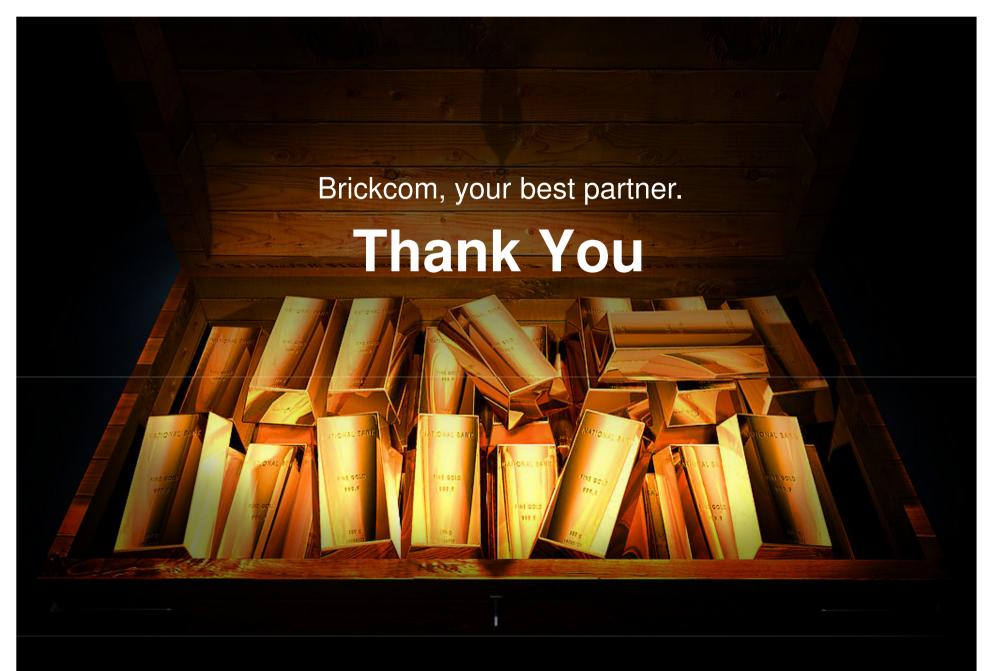

© Brickcom Technology Inc., All Rights Reserved. This document is for planning purposes only, and is not intended to modify or supplement any specifications or warranties relating to products of Brickcom Technology. Brickcom may make changes to specifications and descriptions at any time, without notice.

